

FIG. 1

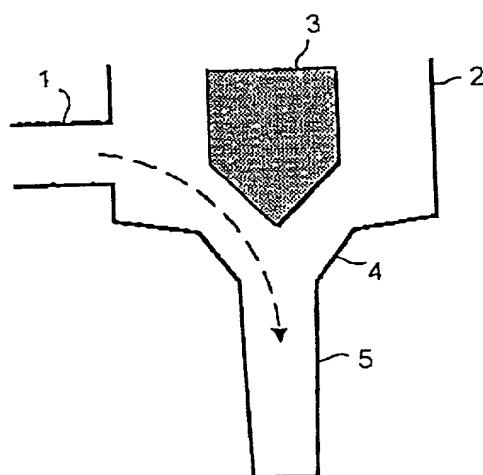
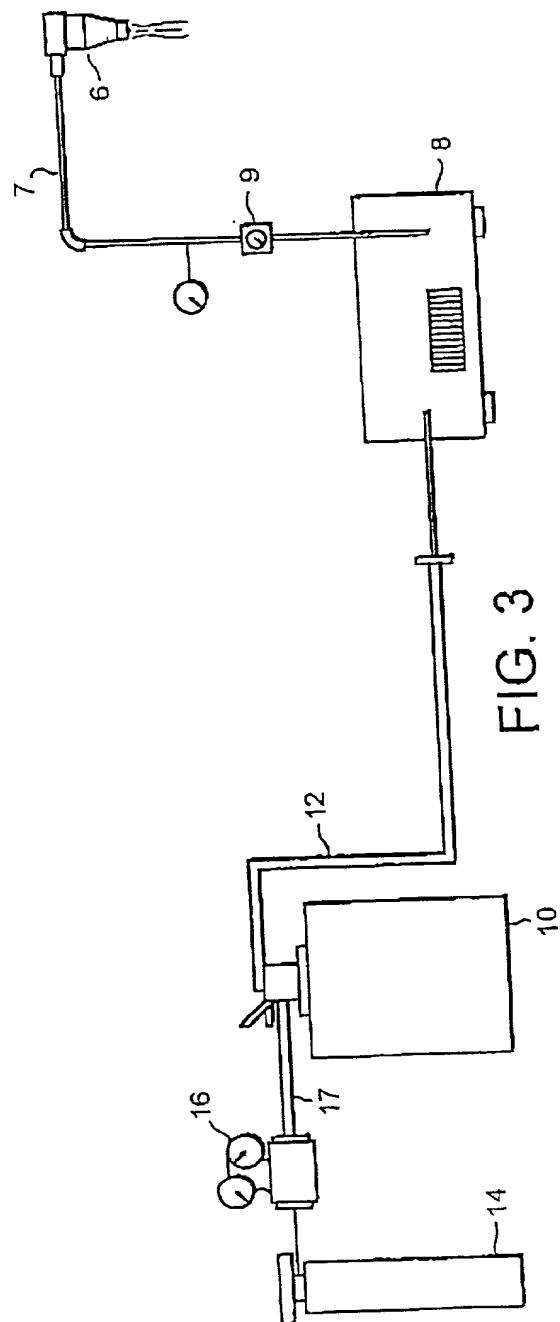
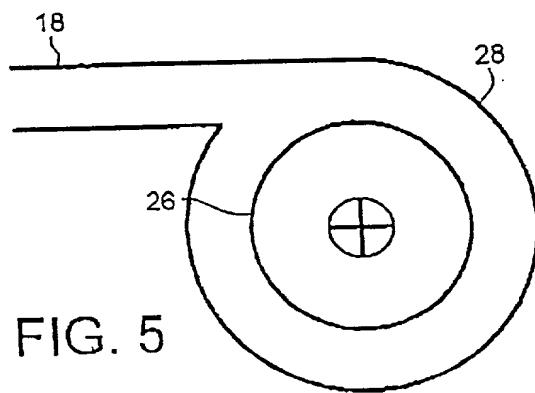
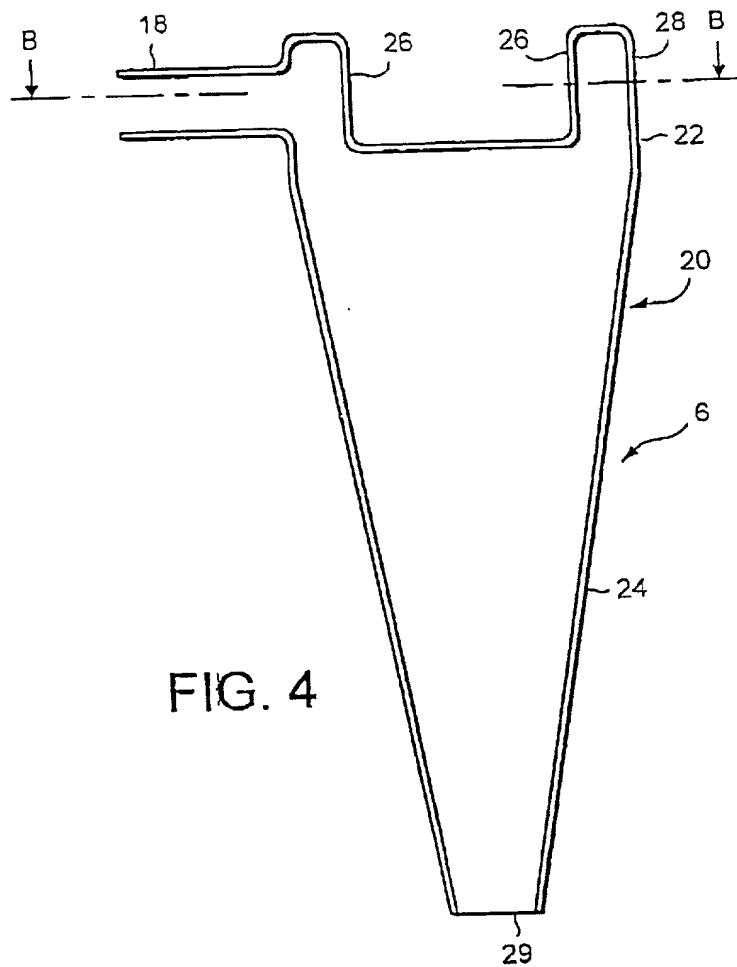


FIG. 2





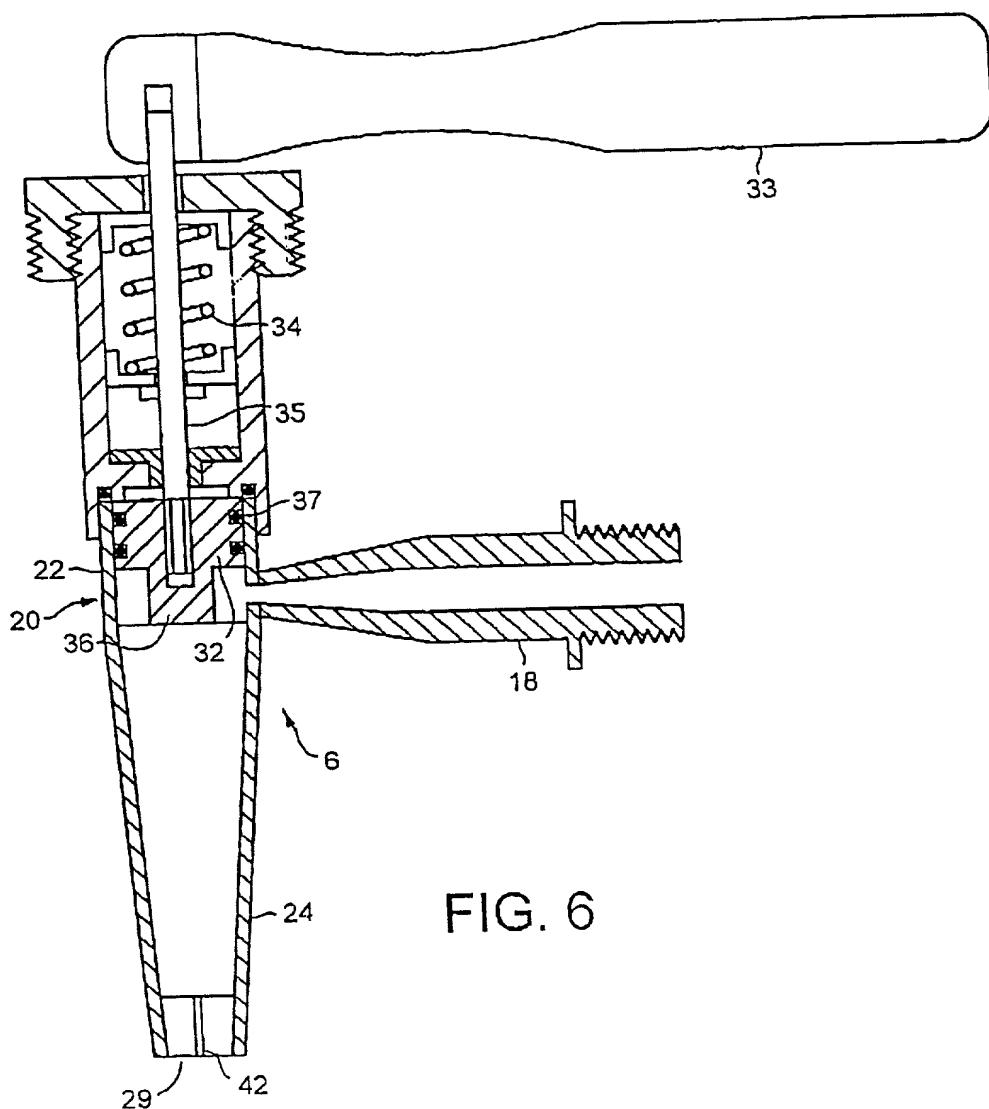


FIG. 6

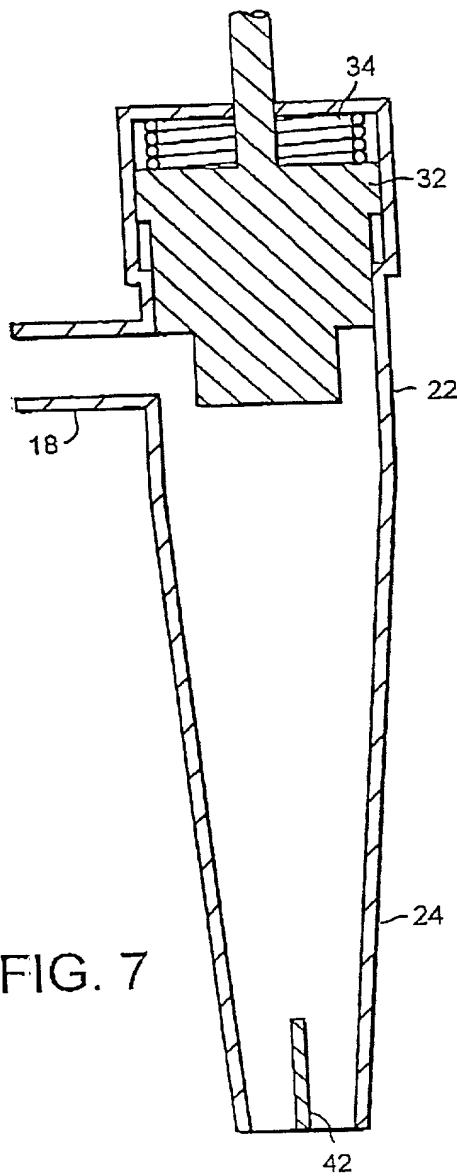


FIG. 7

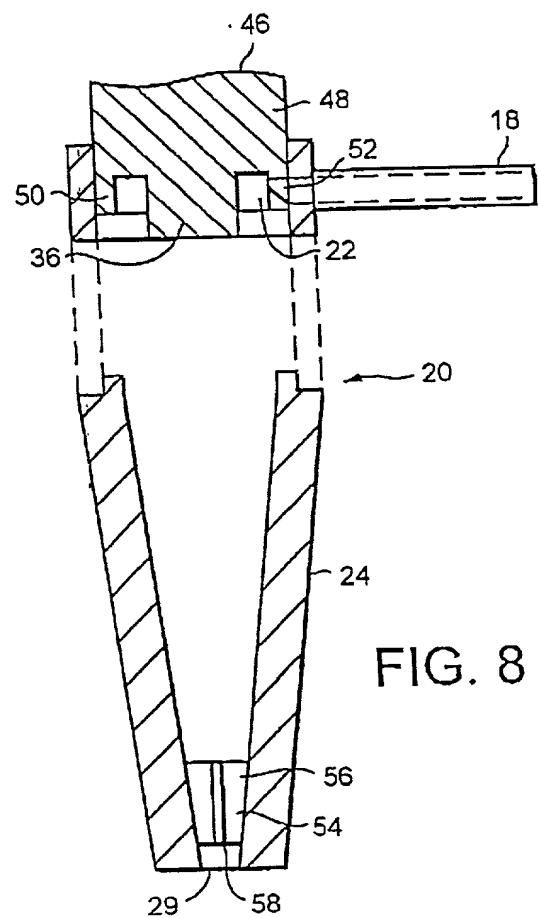


FIG. 8

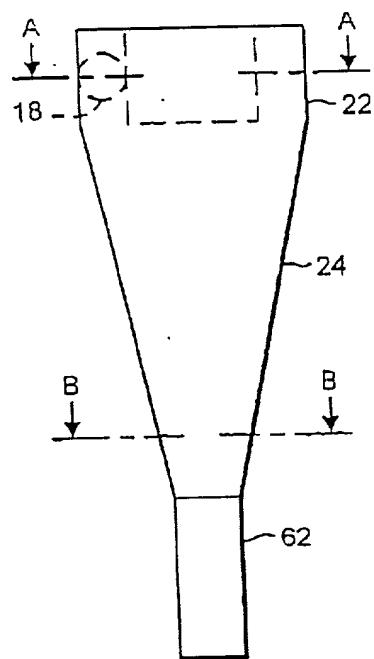


FIG. 9

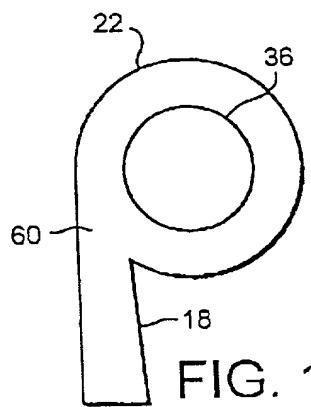


FIG. 10

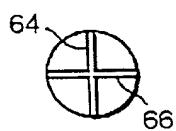
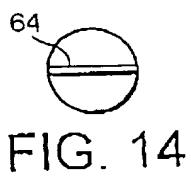
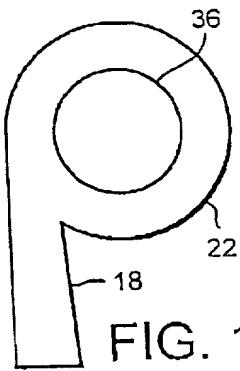
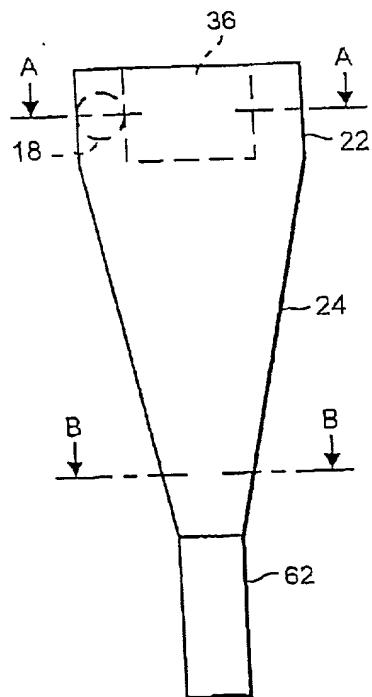


FIG. 11



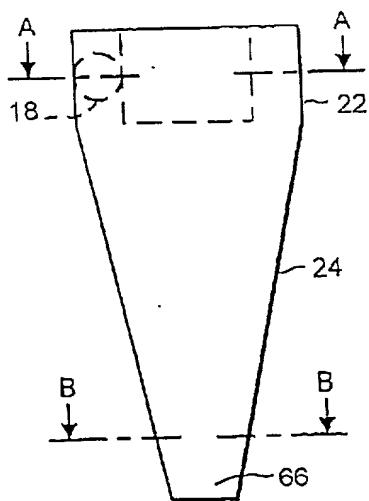


FIG. 15

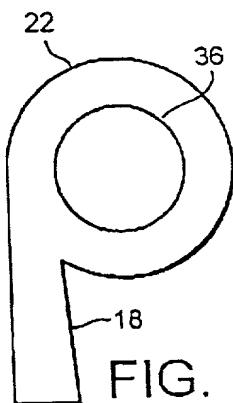


FIG. 16

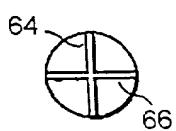


FIG. 17

10 / 18

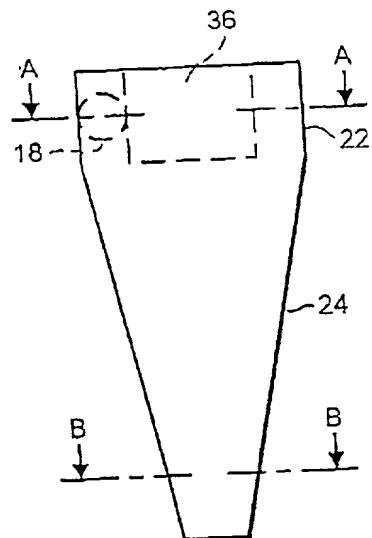


FIG. 18

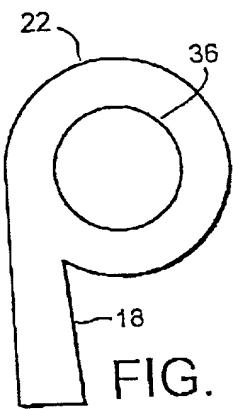


FIG. 19

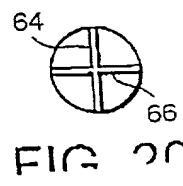


FIG. 20

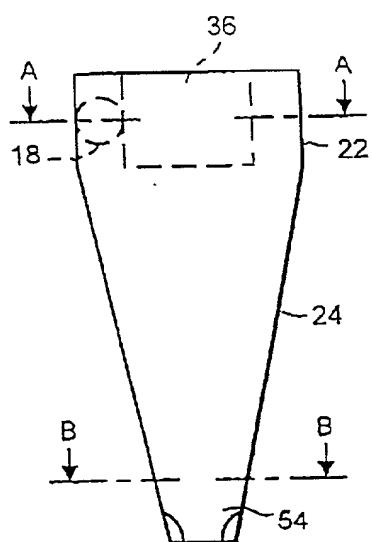


FIG. 21

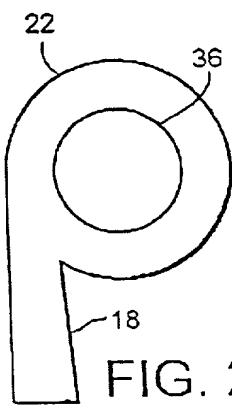


FIG. 22

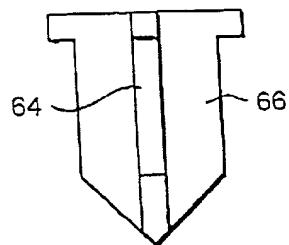


FIG. 23

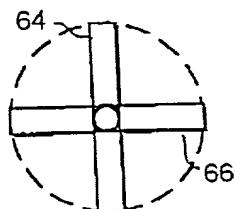


FIG. 24

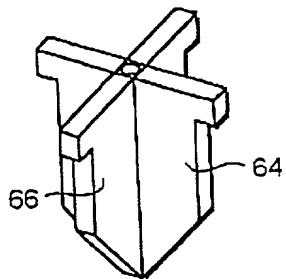


FIG. 25

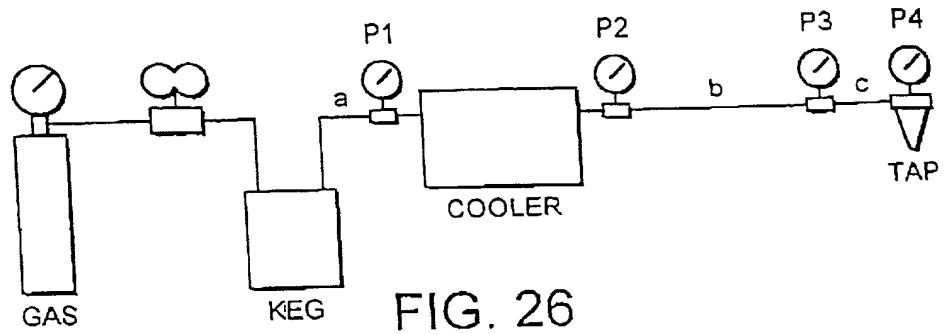
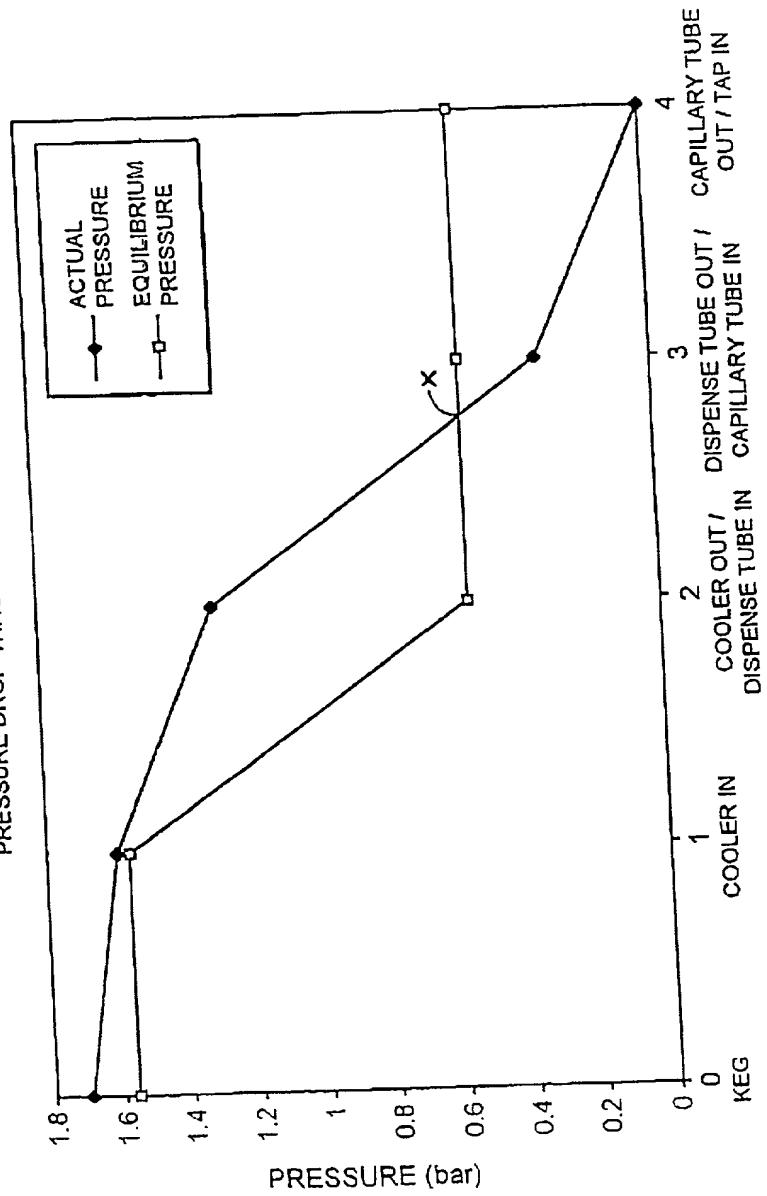


FIG. 26

FIG. 27
PRESSURE DROP THROUGH DISPENSE LINE



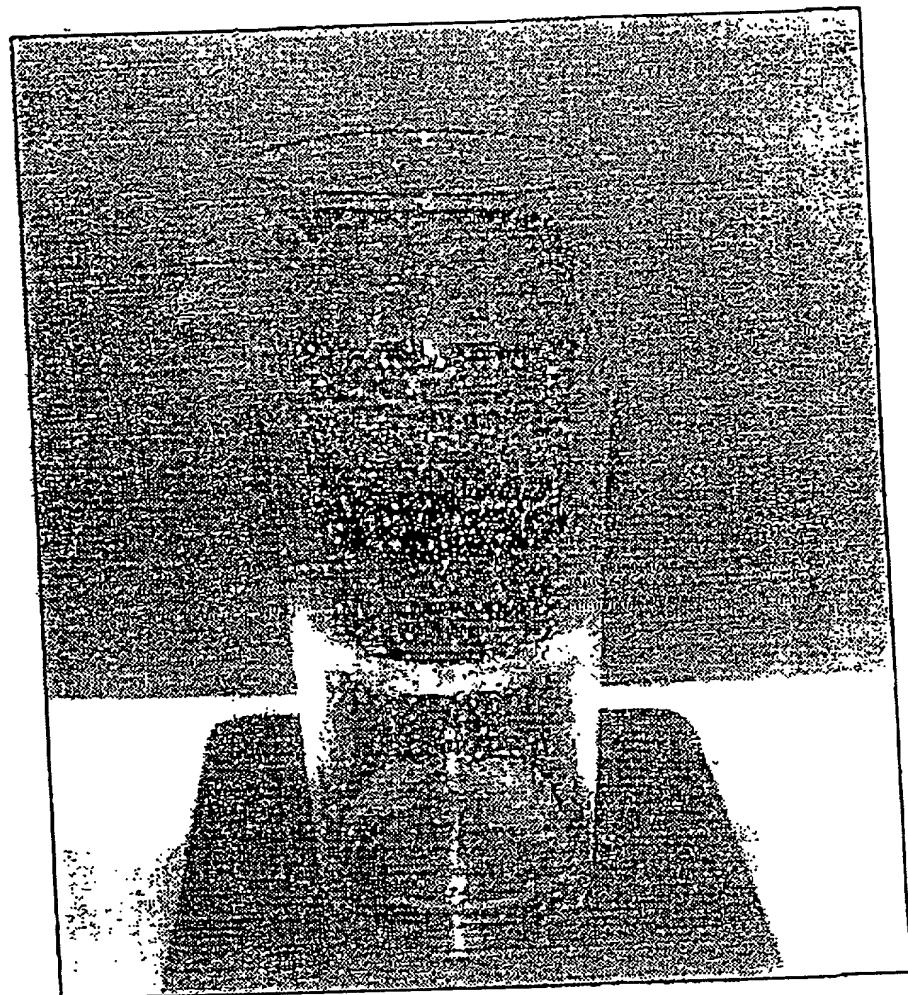
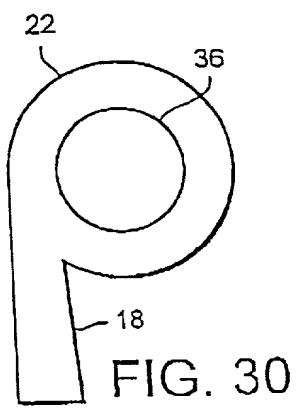
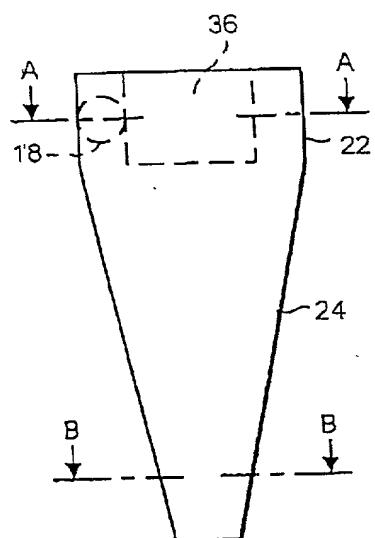


FIG. 28



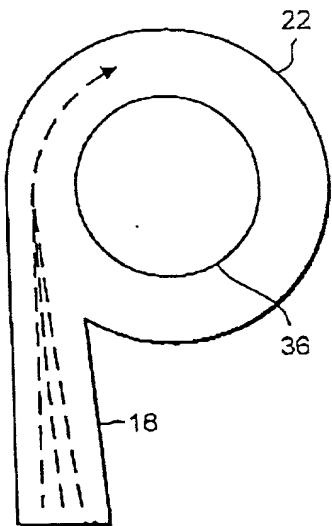


FIG. 31

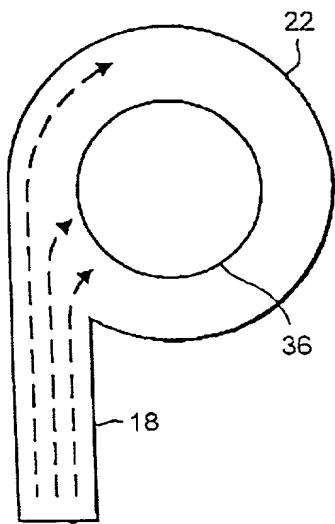


FIG. 32

FIG. 33

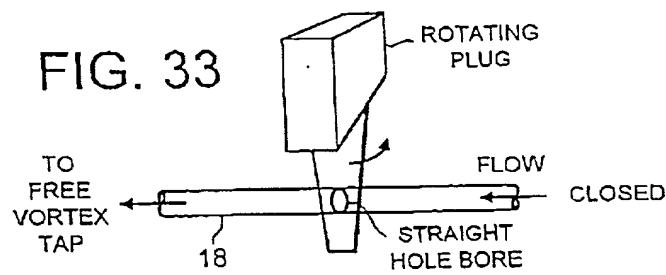


FIG. 34

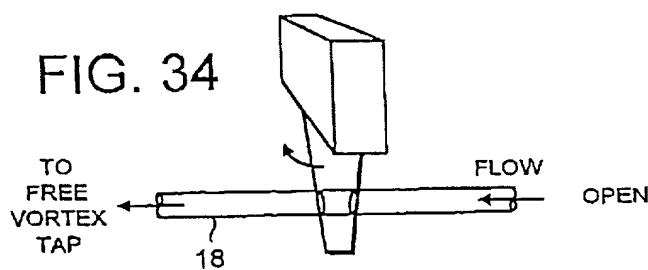


FIG. 35


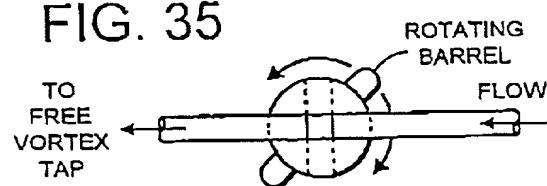


FIG. 36



18 / 18

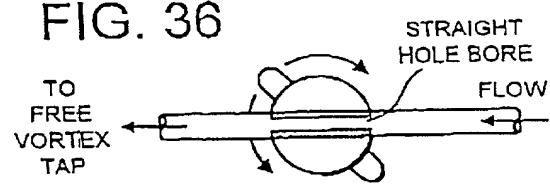